

DvTec - EngRig

CAUTION! READ THIS FIRST!

The support pod is spring-loaded! Handle it with care. To avoid possible physical or property damage to your body or the camera lens, make sure BOTH support pod-locking knobs are locked when inserting or taking out the pod to and from around. Always store in released mode or in loaded mode inside the included belt. Always check that all screws are closed and not loosening.

Thank you for choosing the EngRig support system. The EngRig plate and rods can be used to support any standard 15 mm mattebox systems, follow-focus units, etc.

The EngRig support is designed for full-size shoulder video cameras equipped with any 15mm rod.

Note the rod-end safety stoppers. Remove them for installation only and put them back before use.

Operation:

Never use your EngRig without a safety stopper.

- Slide the support assembly all the way on the rods with the knob on the left side and lock
- Squeeze the pod to its minimum length and lock it.
- Attach the holster to the support belt.
- Put the support belt on.
- Tighten the belt to your waist, just above your hipbone.
- Position the holster aligned with your right shoulder.
- Put the camera on your shoulder in the normal shooting position.
- Proceed with your right hand holding the camera zoom grip at all times!
- Insert the bottom of the pod into the holster.
- Insert the pod's brass tip into the quick release.
- Make sure the brass tip is inserted all the way into the hole and locked.
- Unlock both pods' locking knobs.
- Adjust the black nut counter clockwise for free side tilt mode.
- Adjust the black nut clockwise for horizontal locked mode.

Advanced operation:

- Move the support point along the rods to match your camera weight, the desired overall springness, and spring resistance.
- To adjust the pods length, lift the camera to just above horizontal position and lock the top locking knob.
- The top spring is softer than the bottom spring. Choose the one that is best for your camera weight and type of shooting; lock the other.
- In normal operation, only one section of the pod should be free.
- For extreme up-and-down tilting Slide the support assembly all the way back and release both pole locks.
- For most stable longer-period shoots, or tele-shoots, tighten the nut and both pod locks.