

## Safety

1. To prevent possible hearing damage, do not listen at high volume levels for long periods.
2. Risk of explosion if battery is replaced by an incorrect type, dispose of battery according to the instruction.
3. Recycle your products  
The WEEE logo (shown at right) appears on the product to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by transporting to an appropriate collection point for recycling of such hazardous waste.

**FCC Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

**IC Warning:**  
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

**IC Radiation Exposure Statement:**  
This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

## ECC Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following 2 conditions: (a) This device may not cause harmful interference, and (b) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Warranty

All UltraLITE headsets are warranted against defects in material and/or factory workmanship for a period of one year from the date of purchase. Standard repairs due to misuse or wear and tear, as well as replacement parts including but not limited to batteries, padding, USB cable, etc. are excluded. Shipping is to Eartec at customer's expense, Eartec will pay for return ground shipping if the product warranty applies to the repair.

## Shipping

Prior to returning your headset for warranty or service you must call Eartec and for an RA (Return Authorization) number: 1 (401) 782-4966

## General Service

All repair work will be performed for the cost of replacement parts and return shipping from the Eartec factory.

### Service

Eartec Co Inc  
145 Dean Knauss Dr  
Narragansett RI 02882



[www.eartec.com](http://www.eartec.com)

1.800.399.5994



**EXCELLENT PERFORMANCE**  
Effective range up to 1/4 mile.

**WEAR ON LEFT OR RIGHT EAR**  
Mic boom swivels 270 degrees.

 
**LITHIUM BATTERIES**  
Provide continuous 6 hr operation and are field replaceable.

**DECT TECHNOLOGY**  
(DIGITAL ENHANCED CORDLESS TELECOMMUNICATION)

# The HUB Series

Communicate in Total Comfort  
Full Duplex Wireless System



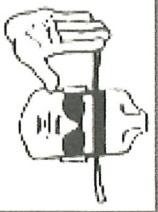

**IMPORTANT**  
The HUB must be turned "ON" to link the corresponding REMOTE headsets.



## Battery

 
The HUB and all UltraLITE headsets are powered by a Lithium Polymer battery that will operate 6 hours when fully charged.

### Charging

- 1) Batteries are charged via the multi-charger.
- 2) Insert the batteries making sure the contacts are properly aligned.
- 3) RED: Charging; GREEN: Fully Charged.

### Installation

- 1) The HUB: Slide battery compartment open, insert battery and click closed.
- 2) Headsets: Press the release button located on the bottom of the battery compartment.
- 3) Insert the battery/ into the compartment (arrow indicates proper direction) and snap door closed.

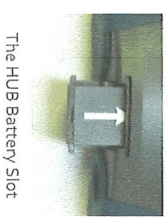


The HUB Battery Slot

### Low Indicator

 A repetitive beep (every 20 seconds) indicates low power – battery should be charged or replaced.


### Battery Care

To preserve optimum charge level remove battery from headsets when system not in use.

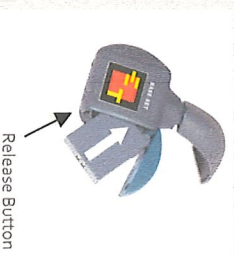

Release Button

## The HUB

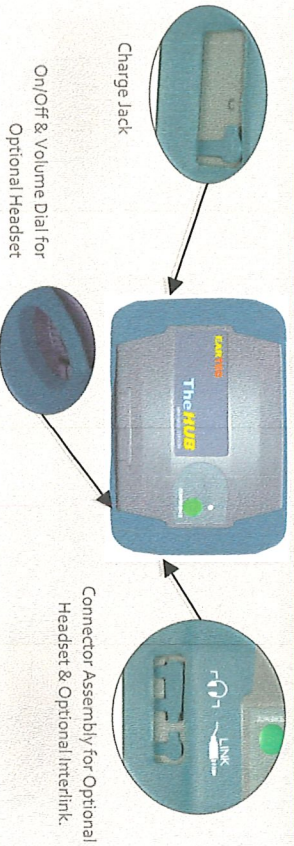 

## Operation

### SYSTEM STARTUP

- 1) Select AC Adapter or battery, then power up The HUB by rotating the ON-OFF/Volume dial clockwise. LED confirms power is on.
- 2) Turn ON each UltraLITE headset by pressing the power button located above the volume controls. A flashing blue LED on the earcup confirms the headset is in search mode.
- 3) Flashing LEDs change to solid blue to indicate that headsets have successfully connected.

### SET VOLUME

UltraLITE headsets feature 5 volume settings. Select the desired volume by slowly clicking the UP or DOWN buttons. An audible tone reflects volume level. A double tone indicates low or max volume has been reached.



*Note: If using a wired headset with the HUB, adjust sound level with volume dial.*

### CONFERENCE MODE

Each time The HUB is turned ON the default setting will be dual channel. Up to 3 headsets can communicate privately on CHA & CHB. Pressing the green CONFERENCE button connects the channels to link all 6 headsets (LED turns red).

### SHUT DOWN

 
Rotate The HUB ON-OFF/Volume dial until it clicks off. Press and hold power button on UltraLITE headsets for 4-5 seconds to turn off.

*Note: To preserve optimum charge level remove battery from headsets when system not in use.*


## Headset Adjustments



Position microphone one-finger width from your mouth. Speak into the front- indicated by TALK.

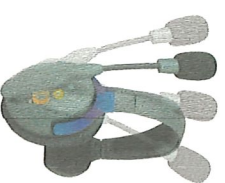

 Boom swivels so headset can be worn on left or right.

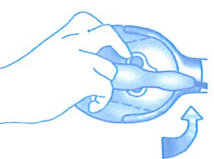

Microphone mutes when boom is in "UP" position.